


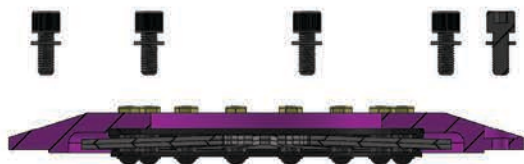


Multi-plate Installation Tech-Bulletin

Installation Order	Part
1	Flywheel
2	Bottom Friction Disc
3	Intermediate plate
4	Sprung Hub
5	Top Friction Disc
6	Pressure Plate
7	Alloy Cover
8	Washers
9	Cover Bolts




Fulcrum Ring
Must Face Upwards

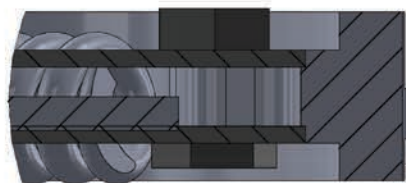

DETAIL A

Hub Locator Offset
Toward Flywheel

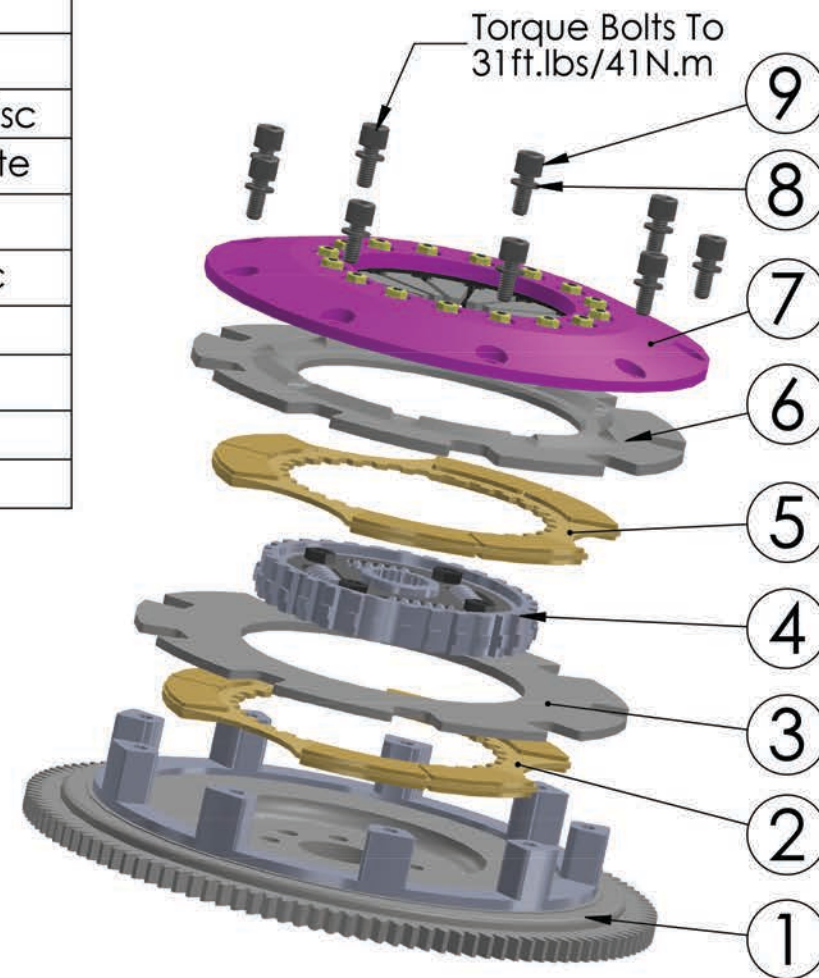

The Real Performance Clutch

200MM