


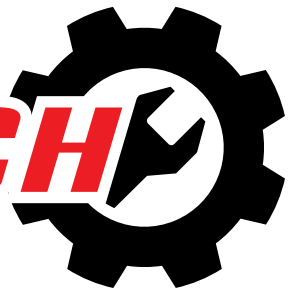

CLUTCHTECH



TSB-217

350/370Z VQ-HR CONCENTRIC SLAVE BRAIDED LINE MOUNTING PROCEDURE

This kit comes with a replacement concentric slave cylinder and braided line to fit in place of the original plastic unit. The braided line replaces the factory hard line from the original concentric slave and the hard line to the rubber flexible hose.



The long section of the hose with the male fitting is threaded into the port on the slave.



The release bearing and mount can be mounted to the transmission using thread retaining compound on the M6 bolts. The braided line then mounts directly to the original rubber line.

To bleed the system fill the reservoir with fluid and allow the fluid to gravity bleed. Using a hand slowly depress the pedal by $\frac{3}{4}$ stroke and back 3-4 times allowing fluid to flow out the bleeder. Tighten the bleeder and fully depress the pedal and open the nipple. Repeat 2-3 times. Then check for full clutch release.

LEADING BRANDS

CLUTCHPRO CLUTCHPRO
RUBBERBELL



australianclutch.com.au

1800 CLUTCH (258824)