



CLUTCHTECH



TSB-233

Bleeding a Concentric Slave Cylinder without a Bleeder port

Fill a container with fresh, compliant brake fluid.



Slowly depress the Slave Cylinder and submerge the line in the fluid.

Hold the slave cylinder with the fluid port as upright as possible, and slowly operate the slave cylinder several times to induce fluid into the piston.




After the transmission has been installed, fill the master cylinder with fresh fluid. Slowly operate the clutch pedal to induce fluid flow from the master to the slave.

Note: This may take up to 50 cycles.



youtube.com/watch?v=sAGOpWfAR9U

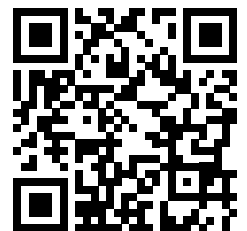

Scan with a QR app on your smart phone

LEADING BRANDS



australianclutch.com.au

1800 CLUTCH (258824)

